

Installation Instructions for Undercounter Water Filter

Hang Water Filter:

Use the two screws provided to hang the filter inside the under counter cabinet. Mount in an easily accessible area, 4-6 inches off the floor to ease filter changes.

Install Angle Stop Adapter Valve for water feed supply:

The provided John Guest Food Safe Polypropylene Adapter Valve (white valve with blue shut-off) is designed to be installed between the existing cold water shut-off valve and the flexible line that attaches to your normal faucet. Remember to shut off the cold water valve before removing the flexible line. Install the Adapter Valve making sure the Adapter Valve Shut Off is in the "off" position parallel to the water flow. This shut-off makes it easy to close off water flow when it's time to change the filter(s). This valve is **not** to be used to regulate water flow and must be used in the full-on or full-off mode. This valve also has a quick connector John Guest fitting to install the 1/4" tubing from the Adapter Valve to the "IN" quick connector on the filter housing.

Attach Tubing to Angle Stop Adapter Valve:

Firmly push in the 1/4" tubing into the adapter valve fitting until it seats (test by giving a gentle tug to make sure it's firmly seated)

Attach Tubing to Housing:

Push the 1/4" tube from the Adapter Valve into the filter housing's **input ("IN")** quick connector. **Push the tube into the quick connector firmly until it seats**, and give a gentle tug to make sure the tube is secure. Route the tubing carefully, so it doesn't crimp. If it's necessary to trim the length of the tubing, cut with a single-edge razor or tubing cutter, making sure the cut is perfectly perpendicular (square). If it is ever necessary to remove the tubing, push the small inner gray ring on the John Guest fitting, that surrounds the tube, inward toward the housing with a finger nail (or flat-bladed screwdriver or other similar tool) while simultaneously gently pulling out on the tubing.

When Changing Filters:

Use a little vegetable oil on your finger to lubricate the rubber "O" rings on the ends of the filter and also the "O" rings in the housings.

After changing filters, be careful NOT to over tighten housings as this may cause a leak.

Also - It is important to let the water run through your new water filter(s) for 15-20 minutes to clear the lines and condition your filters. Please check for leaks at all fittings, faucet and housings.

Handle filter housing with care. Be careful NOT to over tighten housings as this may cause a leak.

We recommend replacing filter housings every 5 years as the plastic may become brittle.

Misapplication of housings will void your warranty. See Warning sticker on housing for details.

Call **1-800-842-4605** from 9 to 4 Central Time Monday through Friday if you have any questions.