

Katadyn® Camp

Operating Instructions

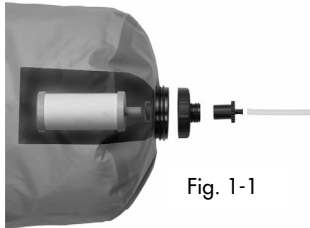


Fig. 1-1

Product Setup

The Camp requires minimal set up.(Fig. 1-1) For best results, try out the Camp before first use and familiarise yourself with its operation. Important: Before first use, flush system by discarding approximately 2 litres (1/2 gallon) to remove harmless ceramic dust.

Normal Operation

- 1) Make sure filter is properly tightened to the bag.
- 2) Fill bag with water. Make sure outlet hose is not dropped in untreated water
- 3) Fold up end of bag and hang as high as possible. The higher the better the flow rate.

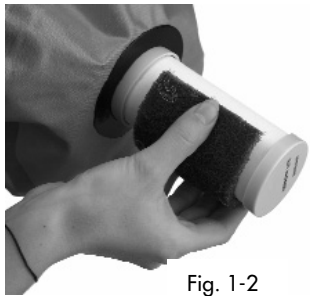


Fig. 1-2

Long Term Storage (After Your Trip is Over)

Store the Camp filter as follows:

- 1) Brush it under running water with the supplied cleaning pad. (Fig. 1-2)
- 2) Allow to air-dry completely. (Fig. 1-3)
- 3) Store Camp inside the transportation casing. (Fig. 1-4)

Note: When removing unit from long term storage, flush the system with 2 litres (1/2 gallon) of water to Remove any stale tasting water.



Fig. 1-3



Fig. 1-4

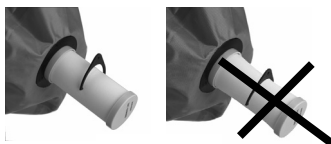


Fig. 1-5

Ceramic Capacity

Ceramic capacity depends on water quality. The dirtier the water the more often you will have to clean the element. This reduces the capacity of approx. 5'300 gallons (20'000 litres). If the gap of the measuring gage fits over the ceramic it is time to replace the filter. (Figure 1-5). Inspect the ceramic for cracks after cleaning, if you dropped the filter or if you had freezing temperatures. If the filter shows cracks it will no longer protect you from micro organisms.

Limited Warranty

Your Katadyn Camp Microfilter is warranted for two (2) years from the date of purchase against defects in materials and workmanship. Should your Katadyn Camp prove defective within one year from the date of purchase, return it to the Katadyn retailer from whom it was purchased. If you have any questions please contact Katadyn at +41 1 839 21 11. Katadyn, at its discretion, will replace or repair the damaged item. Please retain your purchase receipt as proof of date purchased.

Contact International:
Katadyn Products Inc.
Birkenweg 4
8304 Wallisellen / Switzerland
info@katadyn.ch / www.katadyn.ch